



Verti-Clip

Fitting Instructions


AP Diving
Water-Ma-Trout Industrial Estate
Helston, Cornwall, UK
TR13 0LW

TEL: 01326 563834
Email: info@apdiving.com
Website: www.apdiving.com



Verti-clips can be fitted to existing stainless steel D-rings, holding them vertical for one handed Karabiner attachment. Also, extra stainless steel D-rings can be added to any 50mm webbing.

How to fit the Verti-Clip:

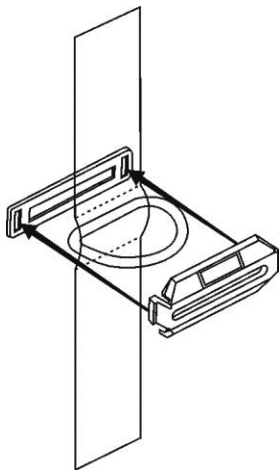

1. If adding an additional D-ring, thread the webbing through the D-ring.
2. Slide the flat section under the chosen D-ring with the indented side towards the D-ring.
3. Place the top section of the Verti-Clip over the D-ring and snap the top and bottom sections together.

To Remove the Verti-Clip use a screwdriver to release both ends.